 



HOW TO FIT YOUR HELMET

Getting the right fit is important for performance and comfort. Use a tape measure and caliper to take measurements. The wearer **MUST** be seated in an upright position for proper fitting. See the illustrations for correct measuring points.


NOTE: If any measurement falls on the dividing line between sizes, select the larger size.

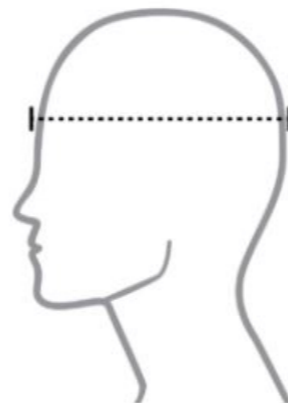

 HEAD LENGTH

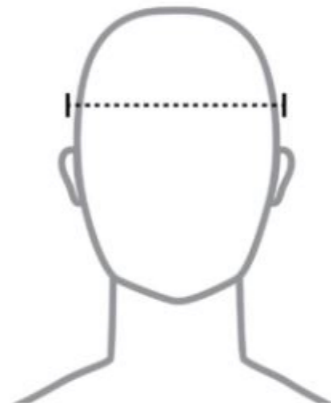

HEAD WIDTH

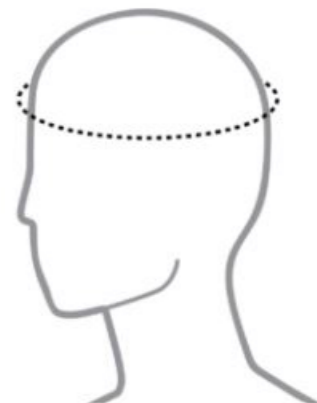 

CIRCUMFERENCE

Measure completely around head

HELMET SIZE	HEAD LENGTH	HEAD WIDTH	CIRCUMFERENCE
Small	UP TO 7¼" / 184 mm	UP TO 6½" / 162 mm	UP TO 21¼" / 538 mm
Medium	7¼" / 184 mm to 7¾" / 198 mm	UP TO 6½" / 162 mm	21¼" / 538 mm to 22½" / 573 mm
Large	7¾" / 198 mm to 8¼" / 210 mm	UP TO 6½" / 162 mm	22½" / 573 mm to 23½" / 597 mm
Extra-Large	8¼" / 210 mm and over	6½" / 162 mm and over	23½" / 597 mm and over